


1:手机连接 WiFi 模块的 AP: USR-WiFi232-T



2: 打开软件 usr-auto-link

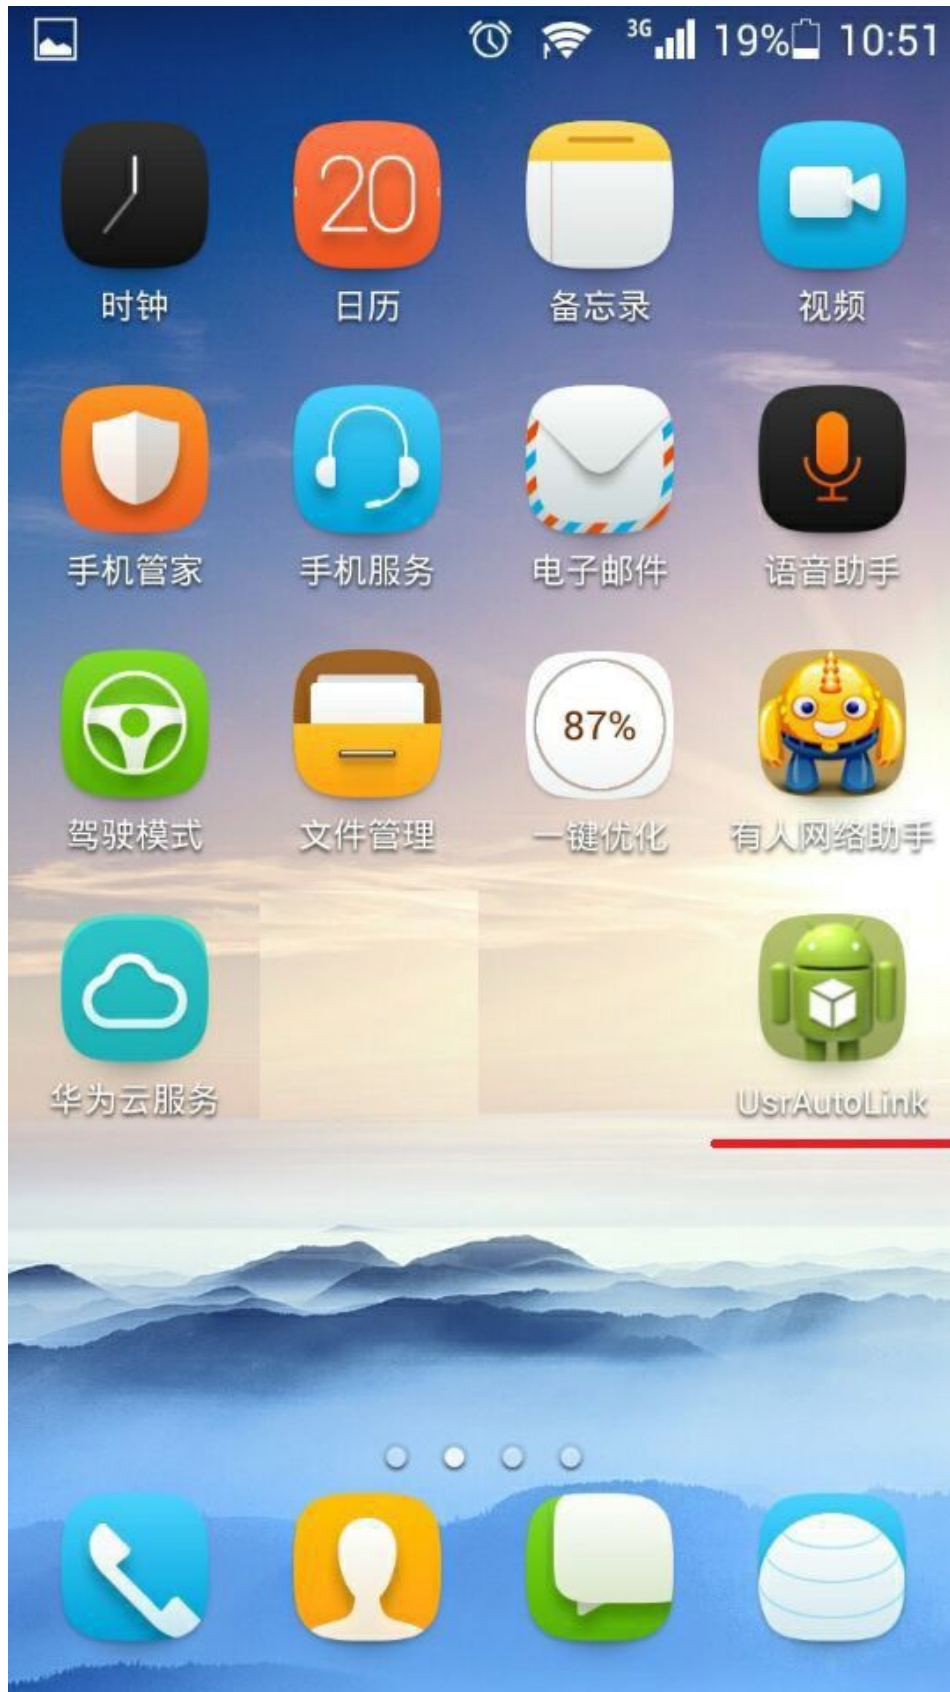

3: 点击搜索, 搜索 SSID, 设置搜索设备的端口号。



UsrAutoLink

ssid




password

49000

ok


4: 点击要连接的路由器ssid

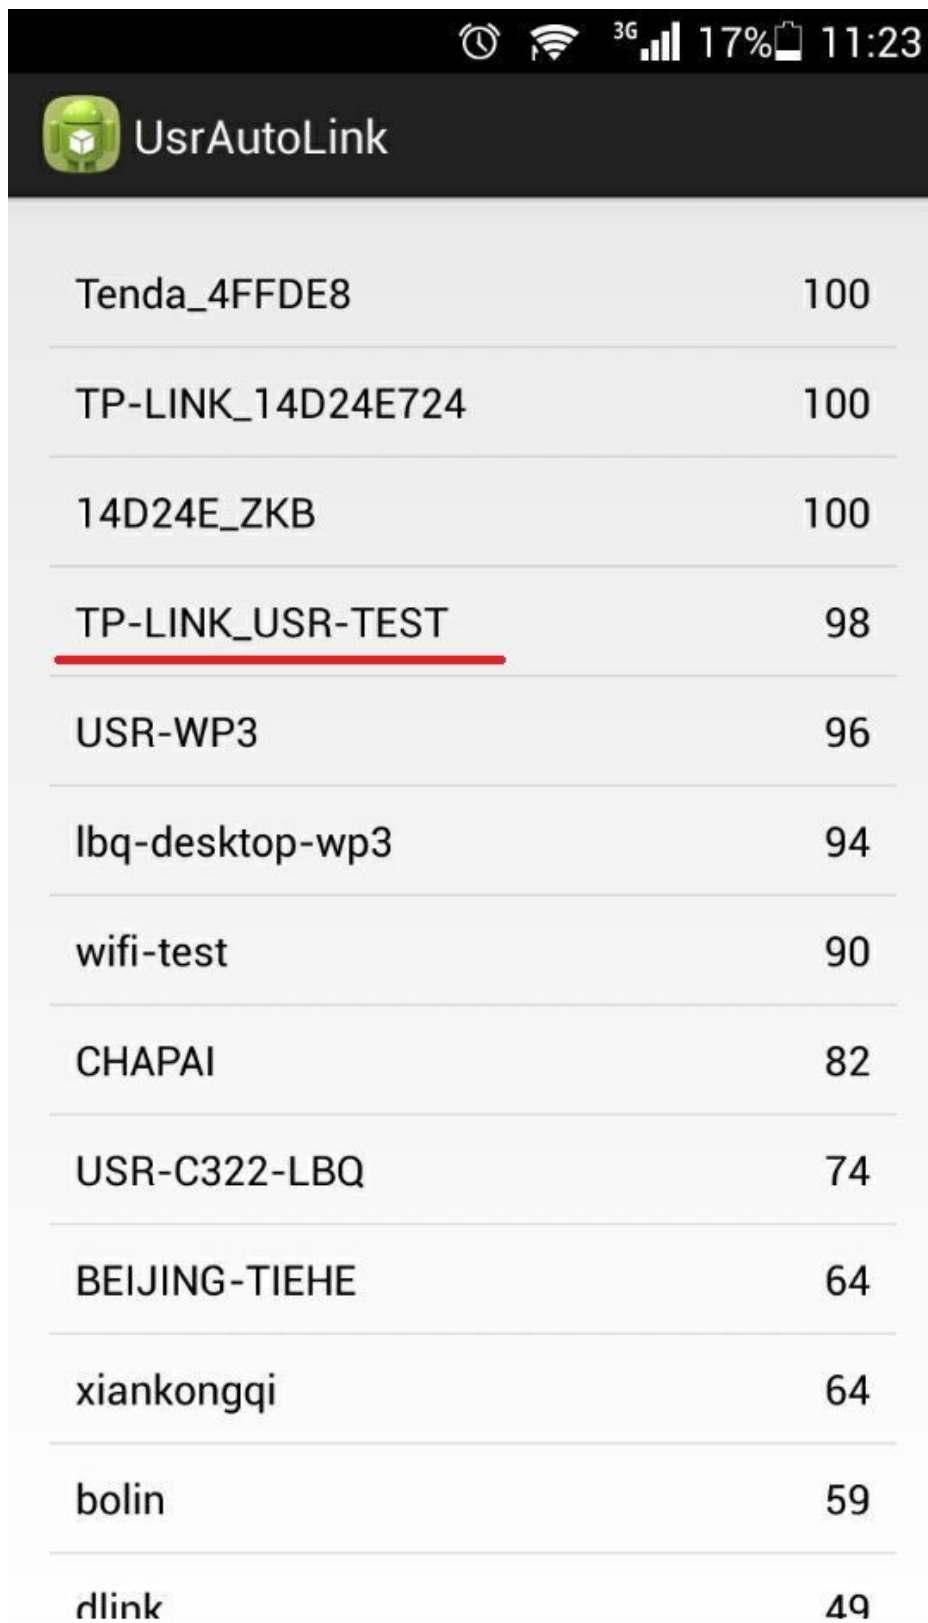

The screenshot shows the UsrAutoLink application interface. At the top, there is a status bar with icons for alarm, Wi-Fi, 3G signal, battery level at 17%, and the time 11:23. Below the status bar is the app's header with a green robot icon and the text 'UsrAutoLink'. The main content is a list of Wi-Fi networks, each with its SSID and a signal strength value. The network 'TP-LINK_USR-TEST' is highlighted with a red underline.

Tenda_4FFDE8	100
TP-LINK_14D24E724	100
14D24E_ZKB	100
<u>TP-LINK_USR-TEST</u>	98
USR-WP3	96
lbq-desktop-wp3	94
wifi-test	90
CHAPAI	82
USR-C322-LBQ	74
BEIJING-TIEHE	64
xiankongqi	64
bolin	59
dlink	49

5: 输入该无线路由器的密码，如果路由器没有密码，可以不输入。

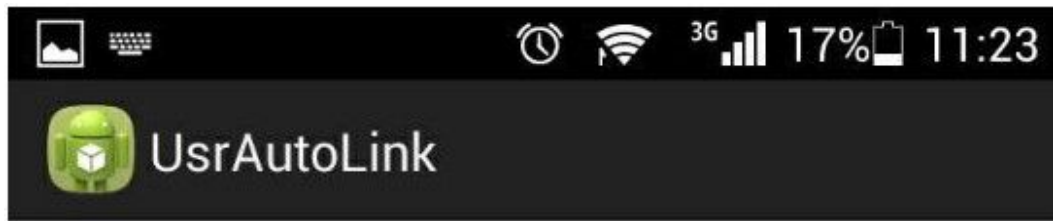

TP-LINK_USR-TEST


www.usr.cn

输入路由器的密码

ok



6: 点击 OK

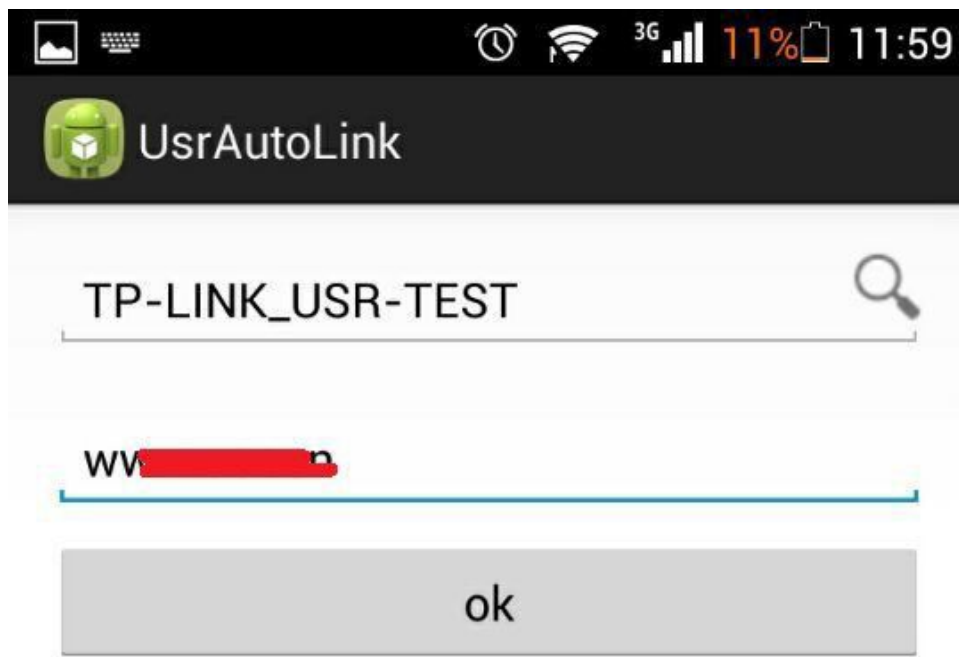

之后，模块的重启后，模块的 link 灯亮，代表可以连接到 WiFi 路由器。

7: 搜索模块加入路由器后获取的IP
电脑连接模块要连接的路由器，



进入路由器查询 WiFi 模块获取到的 IP 地址

